

User manual

Change to new key:

The door can be opened with the installed key (or with the setup key).

With door open, close the boltwork and the lock


Turn the key slowly to the right until the key index is lined-up with the escutcheon index.
(You will hear a “click” in the lock).



Insert the change key into the change key hole at the back of the lock (inside the door). Turn the key about 90° to the RIGHT until it stops. Turn the key to the left and take it out.

Using a new operating key, turn slowly to the right until the key index is lined-up with the escutcheon index.

Turn the change key LEFT and remove.

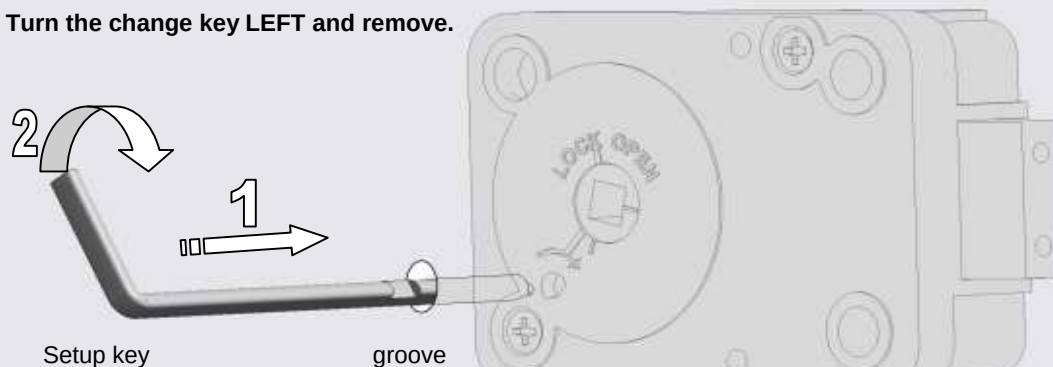

Never use any force!

If the key does not turn at all he has not entered the lock all the way.
Take the key out and put it on the setup mark.

Open several times with new key before locking the door.

Setup key

If a technician programs several locks with one setup key, he has to test the key meanwhile.
In case the key is slightly bent or worn off, the code will not be set exactly.